

Maintenance

Basically unit is maintenance free, but you should check periodically that lenses on outer sensors are clean from dirt or snow.

You can clean them with any water based or alcohol means or using simple wipe.